

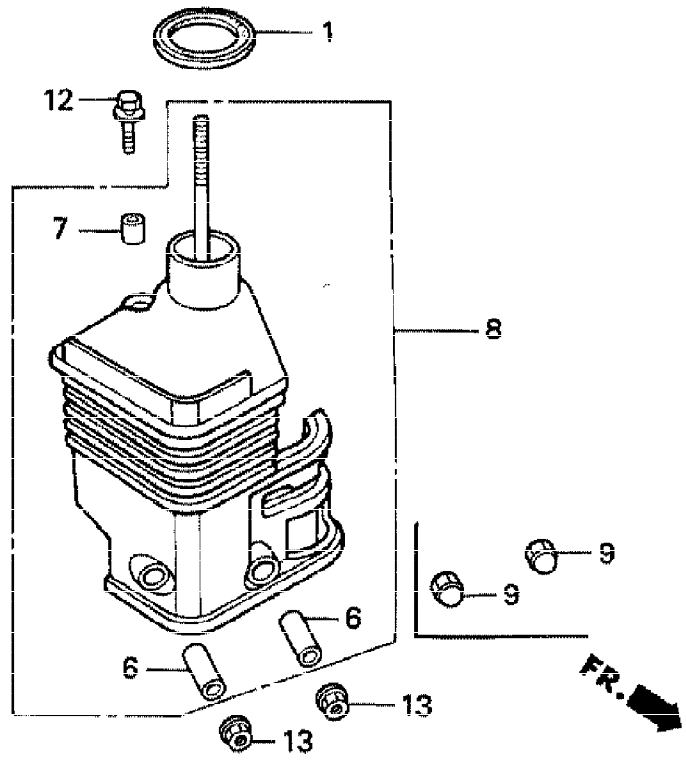


For Parts Call Tools Renewed Inc  
Tel: 800-247-3639  
Fax: 860-665-9821

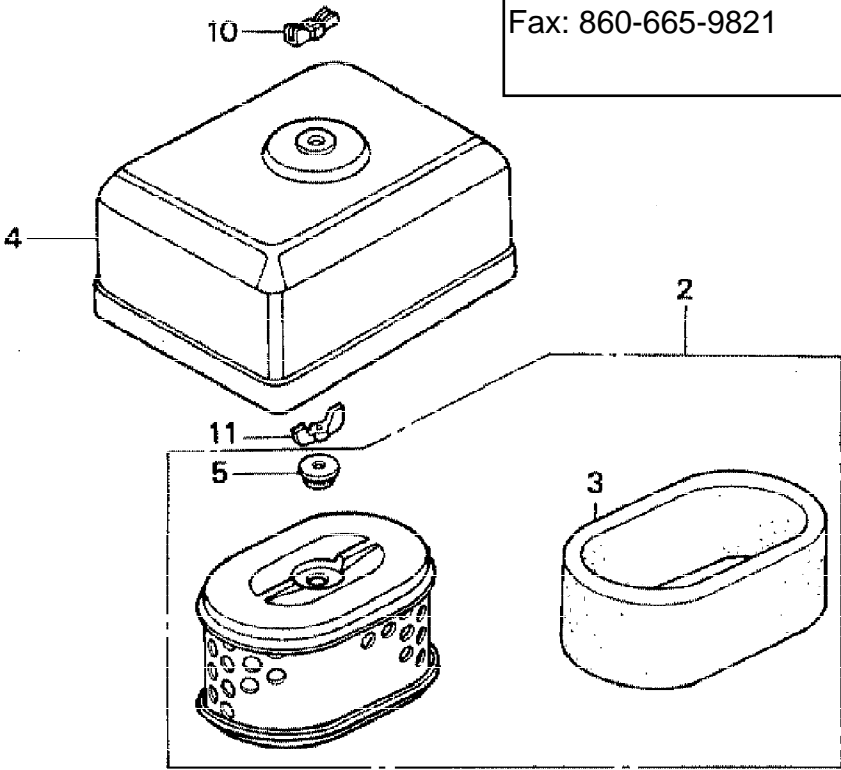


Ref #	Part Number	Qty	Description
1	16271-ZE1-000	1	GASKET, ELBOW (Honda Code 1427194).
2	17210-ZE1-505	1	ELEMENT, AIR CLEANER (DUAL) (Honda Code 5247408).
2	17210-ZE1-822	1	ELEMENT, AIR CLEANER (DUAL) (Honda Code 2893881).
3	17218-ZE1-505	1	FILTER (OUTER) (Honda Code 5272802).
3	17218-ZE1-821	1	FILTER (OUTER) (Honda Code 2535029).
4	17230-ZE1-820	1	COVER, AIR CLEANER (DUAL) (Honda Code 1445790).
5	17232-891-000	1	GROMMET, AIR CLEANER (Honda Code 0999763).
6	17238-ZE7-010	2	COLLAR, AIR CLEANER (Honda Code 2455673).
7	17239-ZE1-000	1	COLLAR B, AIR CLEANER (Honda Code 1427533).
8	17410-ZE1-020	1	ELBOW, AIR CLEANER (Honda Code 2481653).
9	90201-415-000	2	NUT, CAP (6MM) Use up to Engine SN 2709371. (Honda Code 0670729).
10	90203-PB2-000	1	WINGNUT, AIR CLEANER COVER Use up to Engine SN 2468252. (Honda Code 0994855).
10	90203-ZA0-800	1	WINGNUT (6MM) Use from Engine SN 2468253 to 2836833. (Honda Code 1742238).
10	90325-044-000	1	WINGNUT, TOOL BOX SETTING Use from Engine SN 2836834. (Honda Code 0127720).
11	90325-044-000	1	WINGNUT, TOOL BOX SETTING (Honda Code 0127720).
12	93404-06020-08	1	BOLT-WASHER (6X20) (Honda Code 2410694).
12	93494-06020-08	1	BOLT-WASHER (6X20) (Honda Code 0468421).
13	94050-06000	2	NUT, FLANGE (6MM) Use from Engine SN 2709372. (Honda Code 0471623).

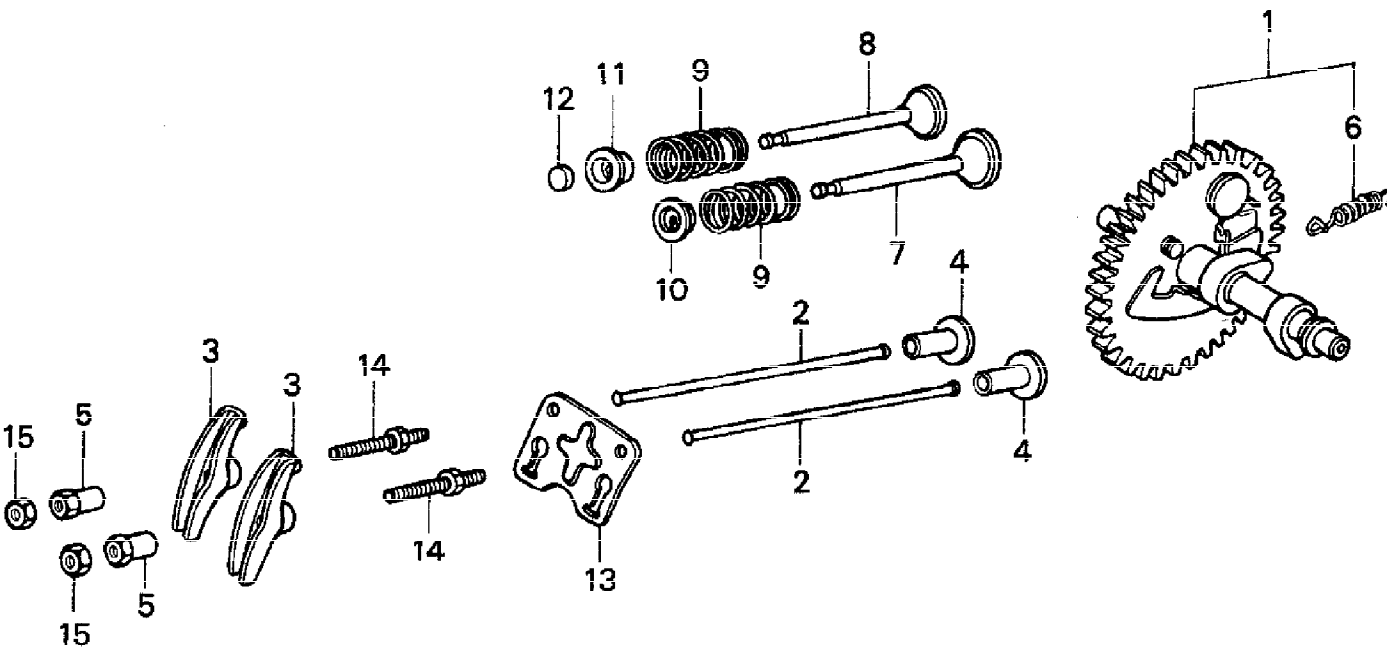

FR. 



Ref #	Part Number	Qty	Description
1	14100-ZE1-812	1	CAMSHAFT ASSY. (Honda Code 1929611).
2	14410-ZE1-010	2	ROD, PUSH (Honda Code 3352655).
3	14431-ZE1-000	2	ARM, VALVE ROCKER (Honda Code 1426824).
4	14441-ZE1-000	2	LIFTER, VALVE Use up to Engine SN 4252173. (Honda Code 1426832).
4	14441-ZE1-010	2	LIFTER, VALVE (Honda Code 5181383).
5	14451-ZE1-003	2	PIVOT, ROCKER ARM Use up to Engine SN 2595468. (Honda Code 1540764).
5	14451-ZE1-013	2	PIVOT, ROCKER ARM (Honda Code 4300901).
6	14568-ZE1-000	1	SPRING, WEIGHT RETURN (Honda Code 1426907).
7	14711-ZF1-000	1	VALVE, IN. (Honda Code 3683455).
8	14721-ZF1-000	1	VALVE, EX. (Honda Code 3683463).
9	14751-ZF1-000	2	SPRING, VALVE (Honda Code 3683489).
10	14771-ZE1-000	1	RETAINER, IN. VALVE SPRING (Honda Code 1426980).
11	14773-ZE1-000	1	RETAINER, EX. VALVE SPRING (Honda Code 1426998).
12	14781-ZE1-000	1	ROTATOR, VALVE (Honda Code 1427004).
13	14791-ZE1-010	1	PLATE, PUSH ROD GUIDE (Honda Code 1899947).
14	90012-ZE0-010	2	BOLT, PIVOT (8MM) (Honda Code 1756964).
15	90206-ZE1-000	2	NUT, PIVOT ADJ. (Honda Code 1431287).

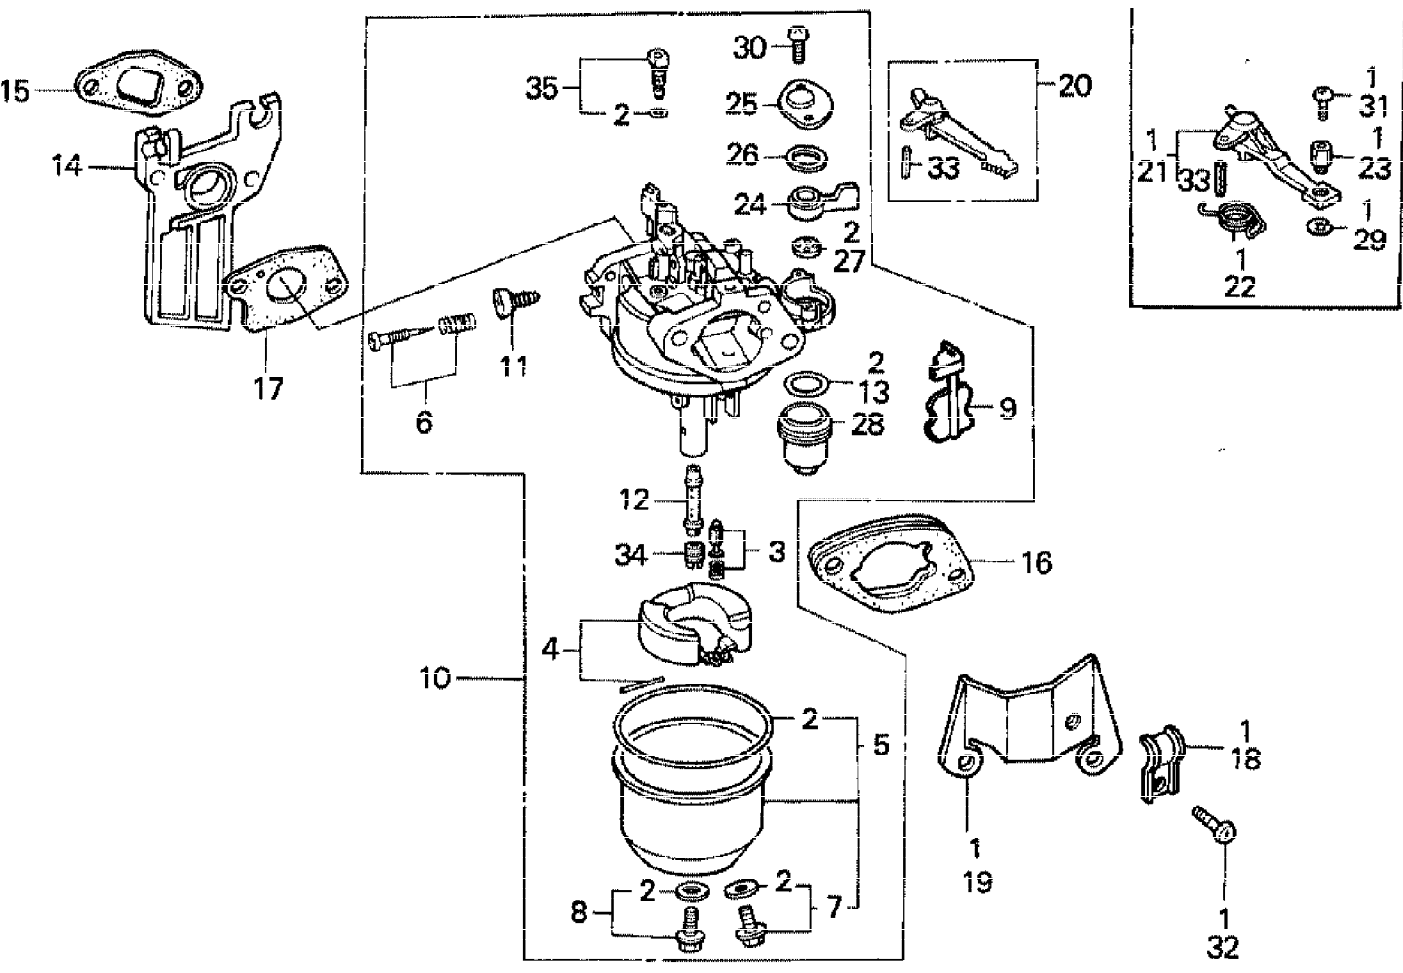

FR. →

Ref #	Part Number	Qty	Description
2	16010-ZE1-812	1	GASKET SET (Honda Code 3477171).
3	16011-ZE0-005	1	VALVE SET, FLOAT (Honda Code 1441476).
4	16013-ZE0-005	1	FLOAT SET (Honda Code 1441492).
5	16015-ZE0-831	1	CHAMBER SET, FLOAT Use from Engine SN BE06J C. (Honda Code 2455608).
5	16015-ZE1-811	1	CHAMBER SET, FLOAT Use up to Engine SN BE06J B. (Honda Code 2464287).
6	16016-ZE0-005	1	SCREW SET, PILOT Use up to Engine SN BE65B A. (Honda Code 1441500).
6	16016-ZH7-W01	1	SCREW SET Use from Engine SN BE65B B. (Honda Code 4219879).
7	16024-ZE1-811	1	SCREW SET, DRAIN (Honda Code 1672187).
8	16028-ZE0-005	1	SCREW SET B (Honda Code 1441518).
9	16044-ZE0-005	1	CHOKE SET Use from Engine SN BE06J B. (Honda Code 1441526).
10	16100-ZH8-W51	1	CARBURETOR ASSY. (BE65B B) Use from Engine SN 6276050. (Honda Code 5152491).
10	16100-ZH8-820	1	CARBURETOR ASSY. Use up to Engine SN 2895090. (Honda Code 3683513).
10	16100-ZH8-822	1	CARBURETOR ASSY. Use up to Engine SN 4012551. (Honda Code 5183728).
10	16100-ZH8-822	1	CARBURETOR ASSY. Use from Engine SN 4012552 to 6276049. (Honda Code 5183728).
11	16124-ZE0-005	1	SCREW, THROTTLE STOP (Honda Code 1441559).
12	16166-ZH8-W50	1	NOZZLE, MAIN Use from Engine SN BE06J B. (Honda Code 4229563).
12	16166-ZH8-810	1	NOZZLE, MAIN Use up to Engine SN BE06J A. (Honda Code 3683539).
13	16173-001-004	1	GASKET, FUEL STRAINER CUP (Honda Code 0005652).
14	16211-ZE1-000	1	INSULATOR, CARBURETOR (Honda Code 1427137).
15	16212-ZH8-800	1	GASKET, INSULATOR (Honda Code 3683547).
16	16220-ZE1-020	1	SPACER, CARBURETOR (Honda Code 2534055).
17	16221-ZH8-801	1	GASKET, CARBURETOR (Honda Code 4725289).
20	16610-ZE1-000	1	LEVER, CHOKE (STD) (Honda Code 1440114).
24	16953-ZE1-812	1	LEVER, VALVE (Honda Code 5140876).
25	16954-ZE1-812	1	PLATE, LEVER SETTING (Honda Code 5148135).
26	16956-ZE1-811	1	SPRING, VALVE LEVER (Honda Code 1807809).
27	16957-ZE1-812	1	GASKET, VALVE (Honda Code 3440708).
28	16967-ZE0-811	1	CUP, FUEL STRAINER (Honda Code 1441583).
30	93500-03006-0H	2	SCREW, PAN (3X6) Use from Engine SN BE06J C. (Honda Code 0561654).
30	93500-03008-0G	2	SCREW, PAN (3X8) Use up to Engine SN BE06J B. (Honda Code 0420505).


Ref #	Part Number	Qty	Description
33	94305-20122	1	PIN, SPRING (2X12) (Honda Code 1441591).
34	99101-ZF5-0680	1	JET, MAIN (#68) (Optional). (Honda Code 3684271).
34	99101-ZF5-0700	1	JET, MAIN (#70) (Optional). (Honda Code 3684289).
34	99101-ZF5-0720	1	JET, MAIN (#72) Use up to Engine SN BE06J A. (Honda Code 3684297).
34	99101-ZH8-0700	1	JET, MAIN (#70) Use from Engine SN 4811852. (Honda Code 5427505).
35	99204-ZE0-0350	1	JET SET, PILOT (#35) Use from Engine SN BE06J B. (Honda Code 1441609).
35	99204-ZE0-0380	1	JET SET, PILOT (#38) Use up to Engine SN BE06J A. (Honda Code 3353075).

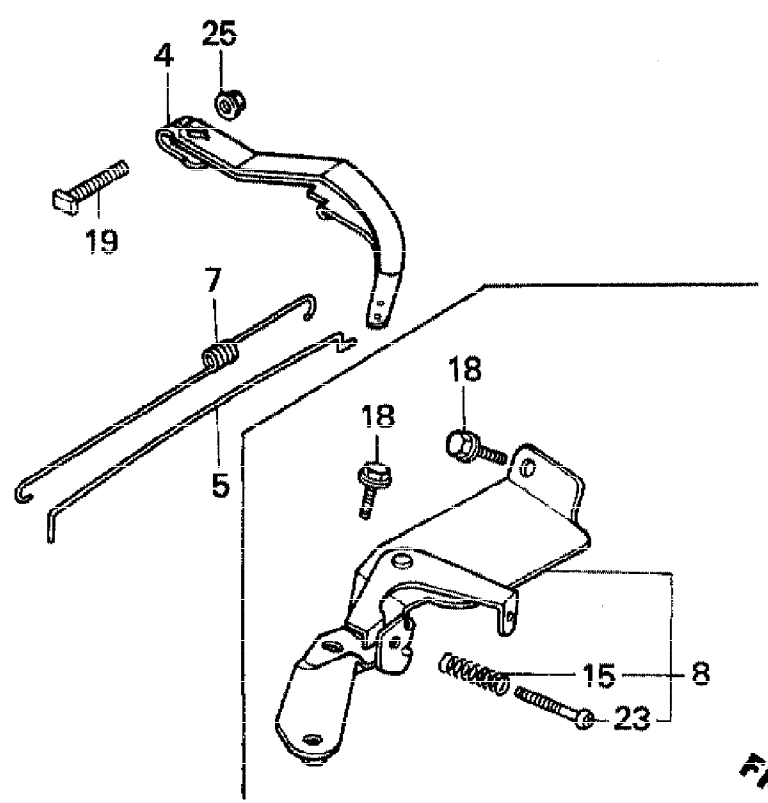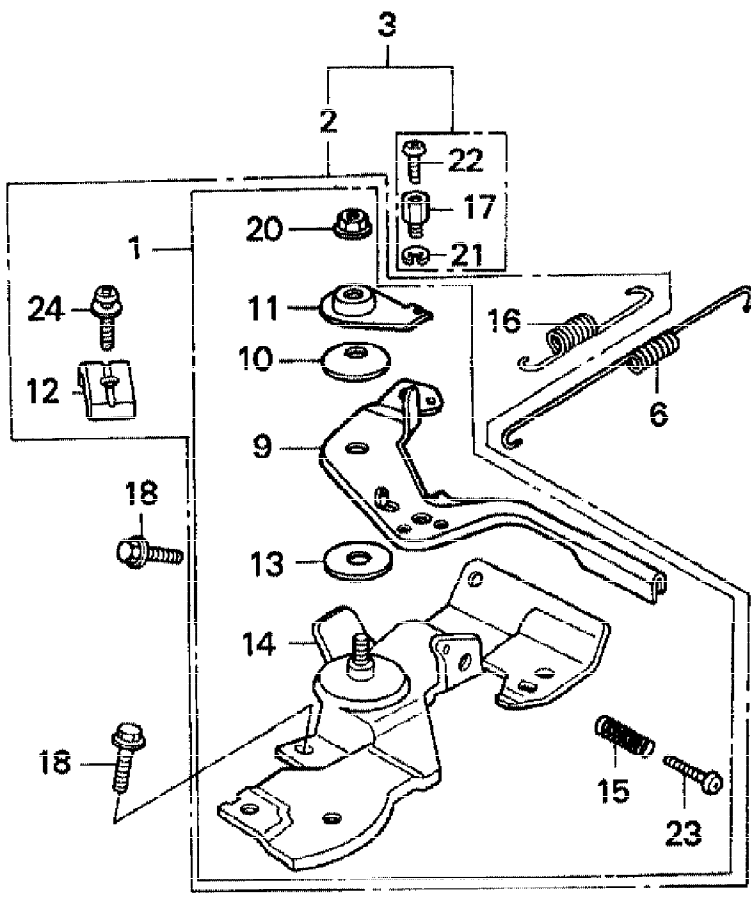

FR. →







Ref #	Part Number	Qty	Description
2	16500-ZH8-821	1	CONTROL ASSY. (REMOTE) Use up to Engine SN 3393321. (Honda Code 4730560).
2	16500-ZH8-821	1	CONTROL ASSY. (REMOTE) Use from Engine SN 3393322 to 5551817. (Honda Code 4730560).
2	16500-ZH8-822	1	CONTROL ASSY. (REMOTE) Use from Engine SN 5551818 to 6331304. (Honda Code 5904669).
2	16500-ZH8-823	1	CONTROL ASSY. (REMOTE) Use up to Engine SN 3393321. (Honda Code 6147755).
2	16500-ZH8-823	1	CONTROL ASSY. (REMOTE) Use from Engine SN 3393322 to 5551817. (Honda Code 6147755).
2	16500-ZH8-823	1	CONTROL ASSY. (REMOTE) Use from Engine SN 6331305. (Honda Code 6147755).
4	16551-ZE0-010	1	ARM, GOVERNOR (Honda Code 1950609).
5	16555-ZE1-000	1	ROD, GOVERNOR (Honda Code 1427319).
6	16561-ZE1-020	1	SPRING, GOVERNOR (Honda Code 1950617).
7	16562-ZE1-020	1	SPRING, THROTTLE RETURN (Honda Code 1950625).
9	16571-ZH8-020	1	LEVER, CONTROL (Honda Code 6145338).
10	16574-ZE1-000	1	SPRING, LEVER (Honda Code 1427384).
11	16575-ZH8-000	1	WASHER, CONTROL LEVER (Honda Code 3683604).
12	16576-891-000	1	HOLDER, CABLE (Honda Code 0800466).
13	16578-ZE1-000	1	SPACER, CONTROL LEVER (Honda Code 1427400).
14	16580-ZH8-811	1	BASE, CONTROL Use up to Engine SN 3393321. (Honda Code 4725321).
14	16580-ZH8-811	1	BASE, CONTROL Use from Engine SN 3393322 to 5551817. (Honda Code 4725321).
14	16580-ZH8-812	1	BASE, CONTROL Use from Engine SN 5551818 to 6331304. (Honda Code 5924451).
14	16580-ZH8-813	1	BASE, CONTROL (REMOTE) Use from Engine SN 5551818. (Honda Code 6145346).
15	16584-883-300	1	SPRING, CONTROL ADJUSTING (Honda Code 0636431).
16	16592-ZE1-810	1	SPRING, CABLE RETURN (Honda Code 1445774).
18	90013-883-000	2	BOLT, FLANGE (6X12) (CT200) Use from Engine SN 2708337. (Honda Code 0636845).
18	90016-ZE1-000	2	BOLT, FLANGE (6X13) Use up to Engine SN 2708336. (Honda Code 1541002).
19	90015-ZE5-010	1	BOLT, GOVERNOR ARM (Honda Code 2418671).
20	90114-SA0-000	1	NUT, SELF-LOCK (6MM) (Honda Code 1410182).
23	93500-05025-0H	1	SCREW, PAN (5X25) (Honda Code 0374702).
24	93500-05016-0A	1	SCREW, PAN (5X16) Use from Engine SN 2752382. (Honda Code 0145557).

Ref #	Part Number	Qty	Description
24	93893-05016-00	1	SCREW-WASHER (5X16) Use up to Engine SN 2752381. (Honda Code 0821512).
25	94050-06000	1	NUT, FLANGE (6MM) (Honda Code 0471623).

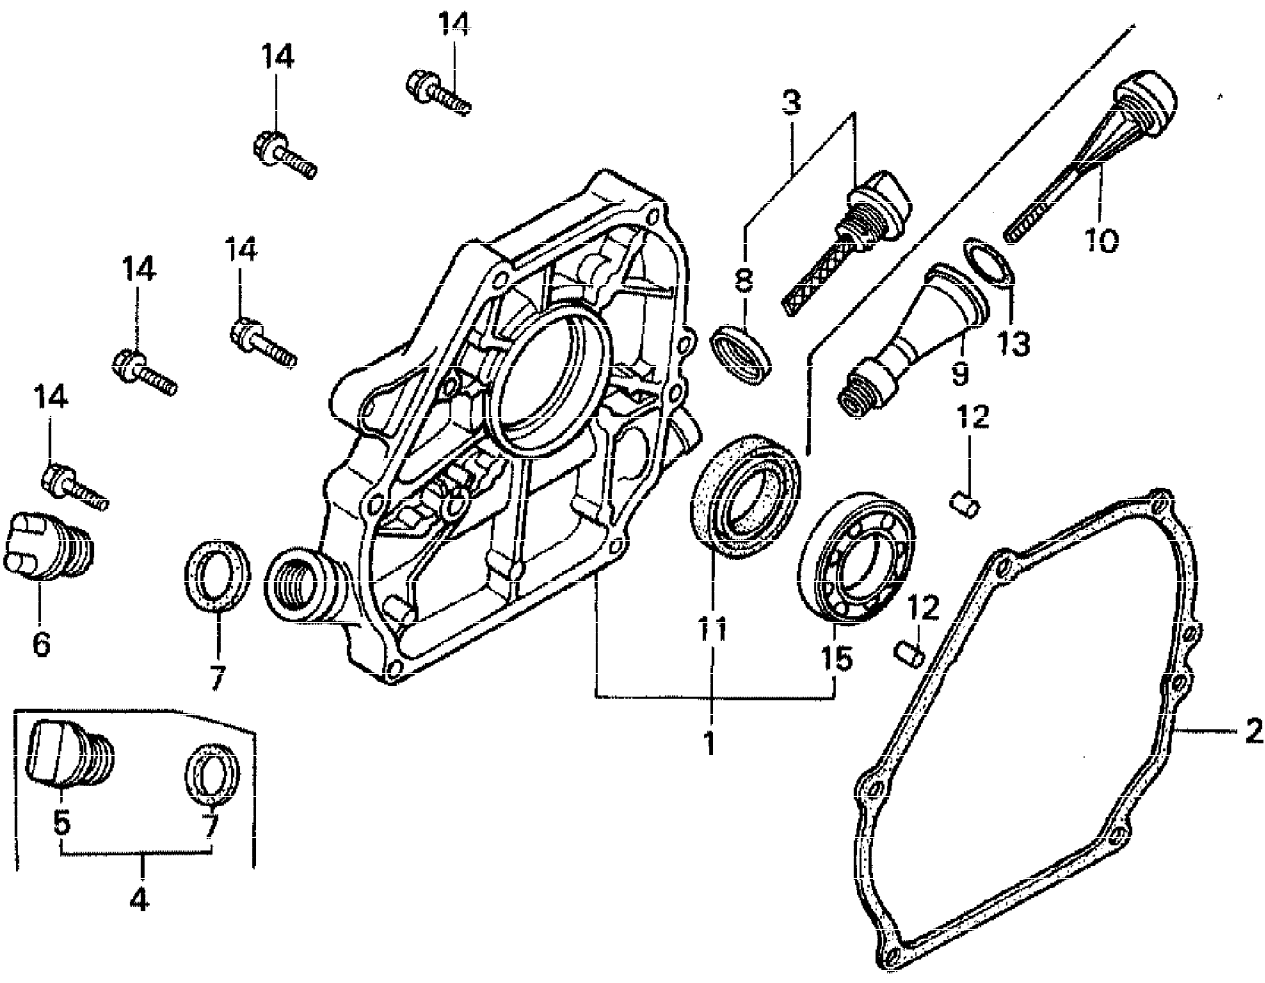


FR. 

Ref #	Part Number	Qty	Description
GX160K1 OX ENGINE, JPN, VIN# GC02-2000001			
1	11300-ZE1-640	1	COVER ASSY., CRANKCASE (U-TYPE) Use up to Engine SN 3451132. (Honda Code 1441146).
1	11300-ZE1-641	1	COVER ASSY., CRANKCASE (U-TYPE) (Honda Code 4731568).
2	11381-ZH8-801	1	GASKET, CASE COVER (NON-ASBESTOS) Use from Engine SN 3413170. (Honda Code 4723144).
3	15600-ZE1-003	1	CAP ASSY., OIL FILLER (Honda Code 4500146).
4	15600-ZG4-003	1	CAP ASSY., OIL FILLER Use from Engine SN 2966710. (Honda Code 4497921).
5	15620-ZE1-003	1	CAP, OIL FILLER Use up to Engine SN 2966709. (Honda Code 4522207).
6	15620-ZG4-910	1	CAP, OIL FILLER Use up to Engine SN 2966709. (Honda Code 3678596).
7	15621-896-010	1	GASKET, OIL FILLER CAP Use up to Engine SN 2966709. (Honda Code 1033042).
7	15625-ZE1-003	1	GASKET, OIL FILLER CAP Use from Engine SN 2966710. (Honda Code 4497947).
8	15625-ZE1-000	1	GASKET, OIL FILLER CAP Use up to Engine SN 2966709. (Honda Code 1427079).
8	15625-ZE1-003	1	GASKET, OIL FILLER CAP Use from Engine SN 2966710. (Honda Code 4497947).
8	15625-ZE1-003	1	GASKET, OIL FILLER CAP Use up to Engine SN 2966709. (Honda Code 4497947).
11	91202-883-005	1	OIL SEAL (25X41X6) (Honda Code 0636936).
12	94301-08140	2	PIN A, DOWEL (8X14) (Honda Code 0069310).
14	95700-08032-00	6	BOLT, FLANGE (8X32) (Honda Code 0637173).
14	95701-08032-00	6	BOLT, FLANGE (8X32) (Honda Code 2751725).
15	96100-62050-00	1	BEARING, RADIAL BALL (6205) (Honda Code 0636977).

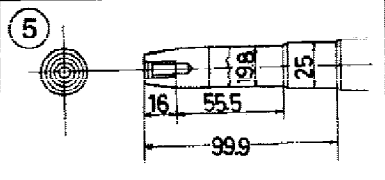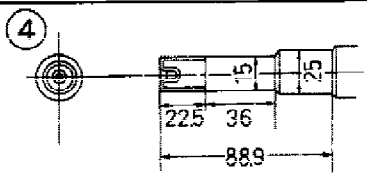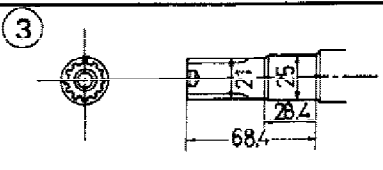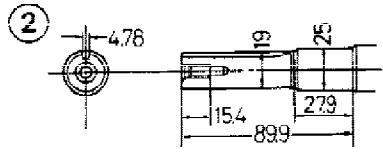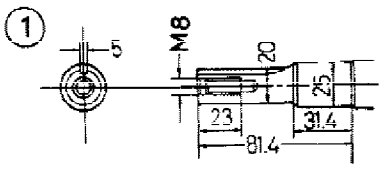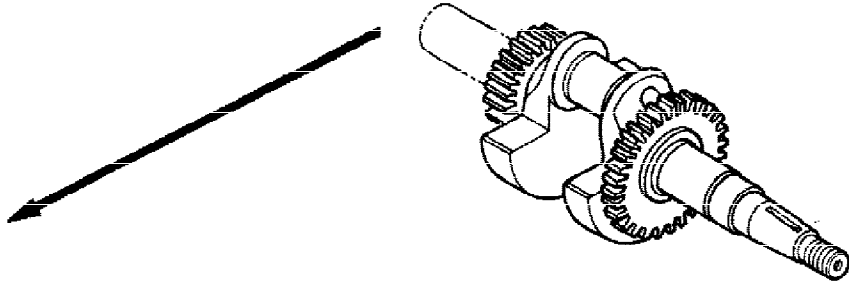


FR.

Ref #	Part Number	Qty	Description
2	13310-ZE1-601	1	CRANKSHAFT (Q-TYPE) (Honda Code 2794535).
6	90745-ZE1-600	1	KEY (4.78X4.78X38) (Honda Code 1441062).

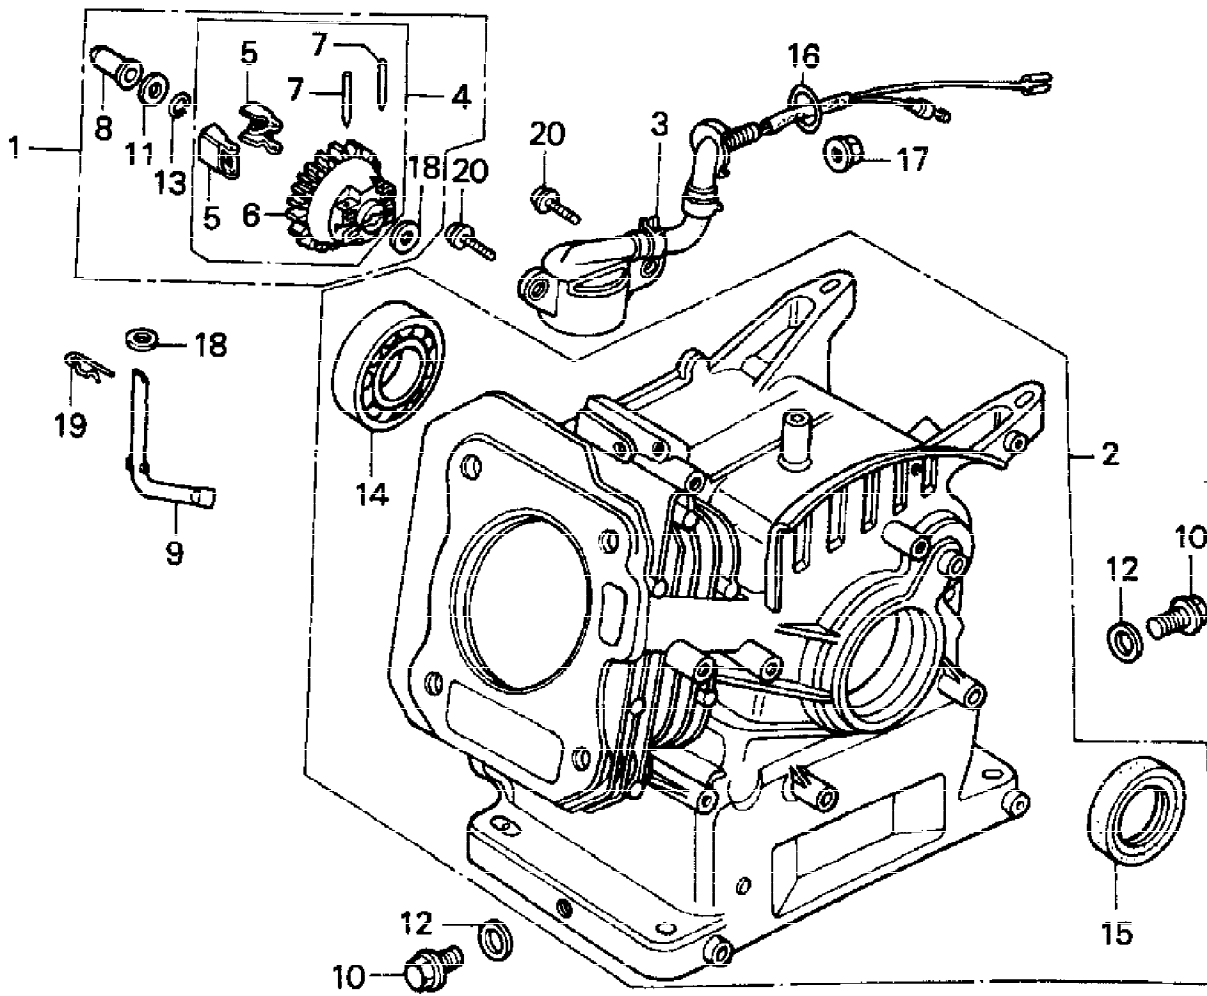


FR. 

Ref #	Part Number	Qty	Description
2	12000-ZH8-406	1	CYLINDER ASSY. (811) Use from Engine SN 4067885. (Honda Code 6363667).
2	12000-ZH8-811	1	CYLINDER ASSY. (OIL ALERT) Use up to Engine SN 4067884. (Honda Code 5032719).
3	15510-ZE1-013	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 2468252. (Honda Code 4192936).
3	15510-ZE1-013	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 2468253. (Honda Code 4192936).
3	15510-ZE1-023	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 2468252. (Honda Code 5262605).
3	15510-ZE1-023	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 4368641 to 5640312. (Honda Code 5262605).
3	15510-ZE1-023	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 2468253. (Honda Code 5262605).
3	15510-ZE1-033	1	SWITCH ASSY., OIL LEVEL Use up to Engine SN 2468252. (Honda Code 5962063).
3	15510-ZE1-033	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 4368641. (Honda Code 5962063).
3	15510-ZE1-033	1	SWITCH ASSY., OIL LEVEL Use from Engine SN 2468253. (Honda Code 5962063).
4	16510-ZE1-000	1	GOVERNOR ASSY. (Honda Code 2414225).
5	16511-ZE1-000	2	WEIGHT, GOVERNOR (Honda Code 1427228).
6	16512-ZE1-000	1	HOLDER, GOVERNOR WEIGHT (Honda Code 1427236).
7	16513-ZE1-000	2	PIN, GOVERNOR WEIGHT (Honda Code 1427244).
8	16531-ZE1-000	1	SLIDER, GOVERNOR (Honda Code 1427251).
9	16541-ZE1-000	1	SHAFT, GOVERNOR ARM (Honda Code 1427277).
10	90131-ZE1-000	2	BOLT, DRAIN PLUG (Honda Code 1431246).
11	90451-ZE1-000	1	WASHER, THRUST (6MM) (Honda Code 2413862).
12	90601-ZE1-000	2	WASHER, DRAIN PLUG (10.2MM) (Honda Code 1436583).
13	90602-ZE1-000	1	CLIP, GOVERNOR HOLDER (Honda Code 2456697).
14	91001-ZF1-003	1	BEARING, RADIAL BALL (6205) (Honda Code 3684248).
15	91202-883-005	1	OIL SEAL (25X41X6) (Honda Code 0636936).
16	91353-671-003	1	O-RING (13.5X1.5) (ARAI) (Honda Code 0949883).
17	94050-10000	1	NUT, FLANGE (10MM) (Honda Code 0483867).
18	94101-06800	2	WASHER, PLAIN (6MM) (Honda Code 0345900).
19	94251-08000	1	PIN, LOCK (8MM) (Honda Code 0115527).
20	95701-06012-00	2	BOLT, FLANGE (6X12) (Honda Code 2105799).

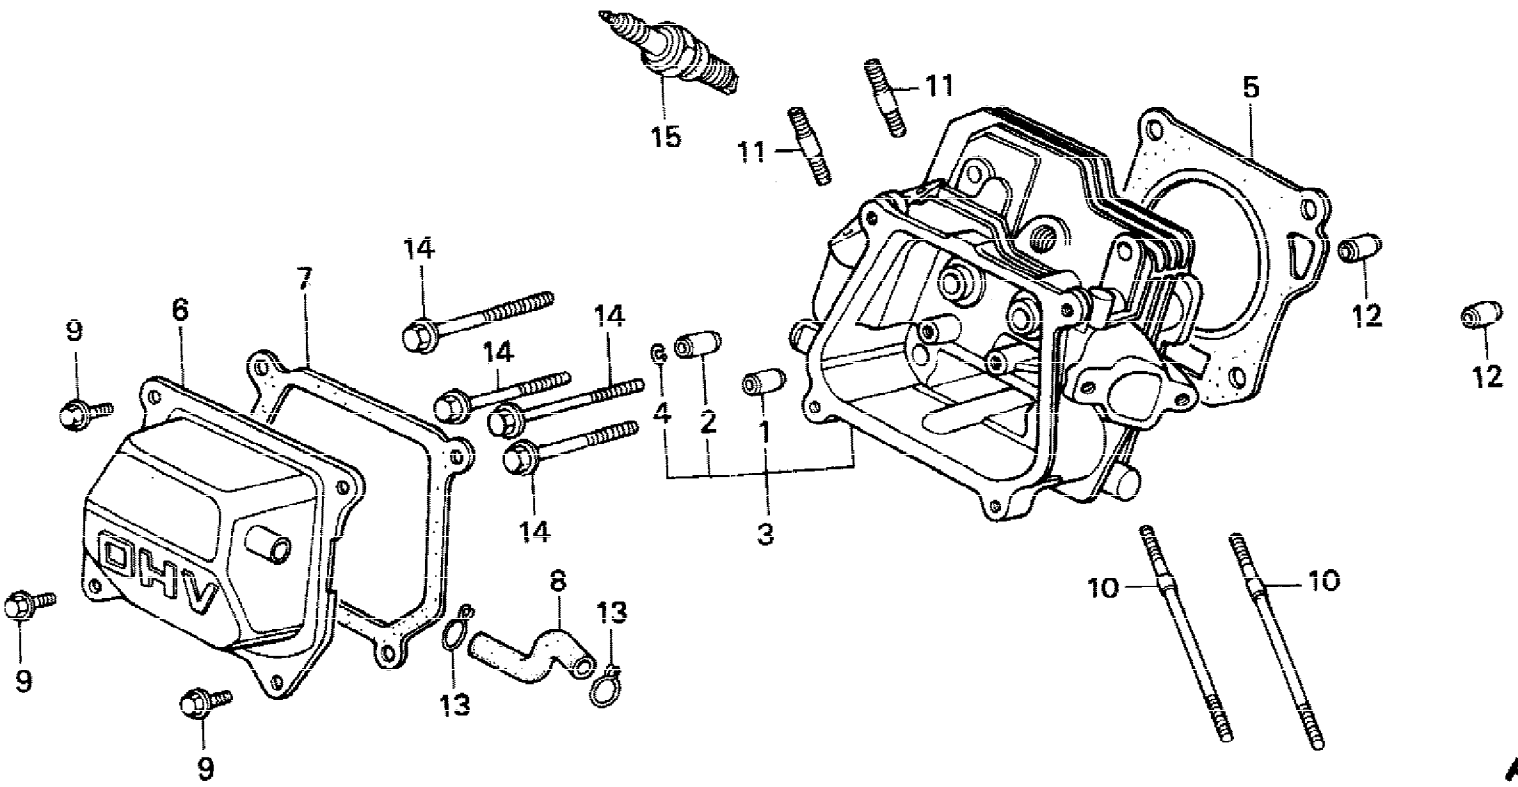

FR. 


Ref #	Part Number	Qty	Description
1	12204-ZE1-305	1	GUIDE, VALVE (OS) Use up to Engine SN 2401552. (Honda Code 1441096).
1	12204-ZE1-306	1	GUIDE, VALVE (OS) (Optional). Use from Engine SN 2401553. (Honda Code 4165874).
1	12204-ZE1-306	1	GUIDE, VALVE (OS) Use up to Engine SN 2401552. (Honda Code 4165874).
2	12205-ZE1-315	1	GUIDE, EX. VALVE (OS) (Optional). (Honda Code 1899848).
3	12210-ZH8-000	1	CYLINDER HEAD (Honda Code 4581401).
3	12210-ZH8-020	1	CYLINDER HEAD (Honda Code 6779243).
4	12216-ZE5-300	1	CLIP, VALVE GUIDE (Honda Code 2399780).
5	12251-ZF1-800	1	GASKET, CYLINDER HEAD (Honda Code 3683380).
6	12310-ZE1-000	1	COVER, HEAD Use up to Engine SN 3430748. (Honda Code 1426519).
6	12310-ZE1-010	1	COVER, HEAD (Honda Code 4725248).
7	12391-ZE1-000	1	GASKET, CYLINDER HEAD COVER (Honda Code 1426527).
8	15721-ZH8-000	1	TUBE, BREATHER (Honda Code 3683497).
9	90013-883-000	4	BOLT, FLANGE (6X12) (CT200) Use from Engine SN 2708337. (Honda Code 0636845).
9	90016-ZE1-000	4	BOLT, FLANGE (6X13) Use up to Engine SN 2708336. (Honda Code 1541002).
10	90043-ZE1-010	2	BOLT, STUD (6X109) Use up to Engine SN 2995849. (Honda Code 1904077).
10	90043-ZE1-020	2	BOLT, STUD (6X109) (Honda Code 4588323).
11	90047-ZE1-000	2	BOLT, STUD (8X32) (Honda Code 1431097).
12	94301-10160	2	PIN A, DOWEL (10X16) (Honda Code 0058206).
14	95723-08060-00	4	BOLT, FLANGE (8X60) (Honda Code 1436591).
15	98079-55846	1	SPARK PLUG (BPR5ES) (NGK) (Optional). (Honda Code 1672443).
15	98079-55855	1	SPARK PLUG (W16EPR-U) (DENSO) (Optional). (Honda Code 1672450).
15	98079-56846	1	SPARK PLUG (BPR6ES) (NGK) (Honda Code 1441112).
15	98079-56855	1	SPARK PLUG (W20EPR-U) (DENSO) (Honda Code 1441120).

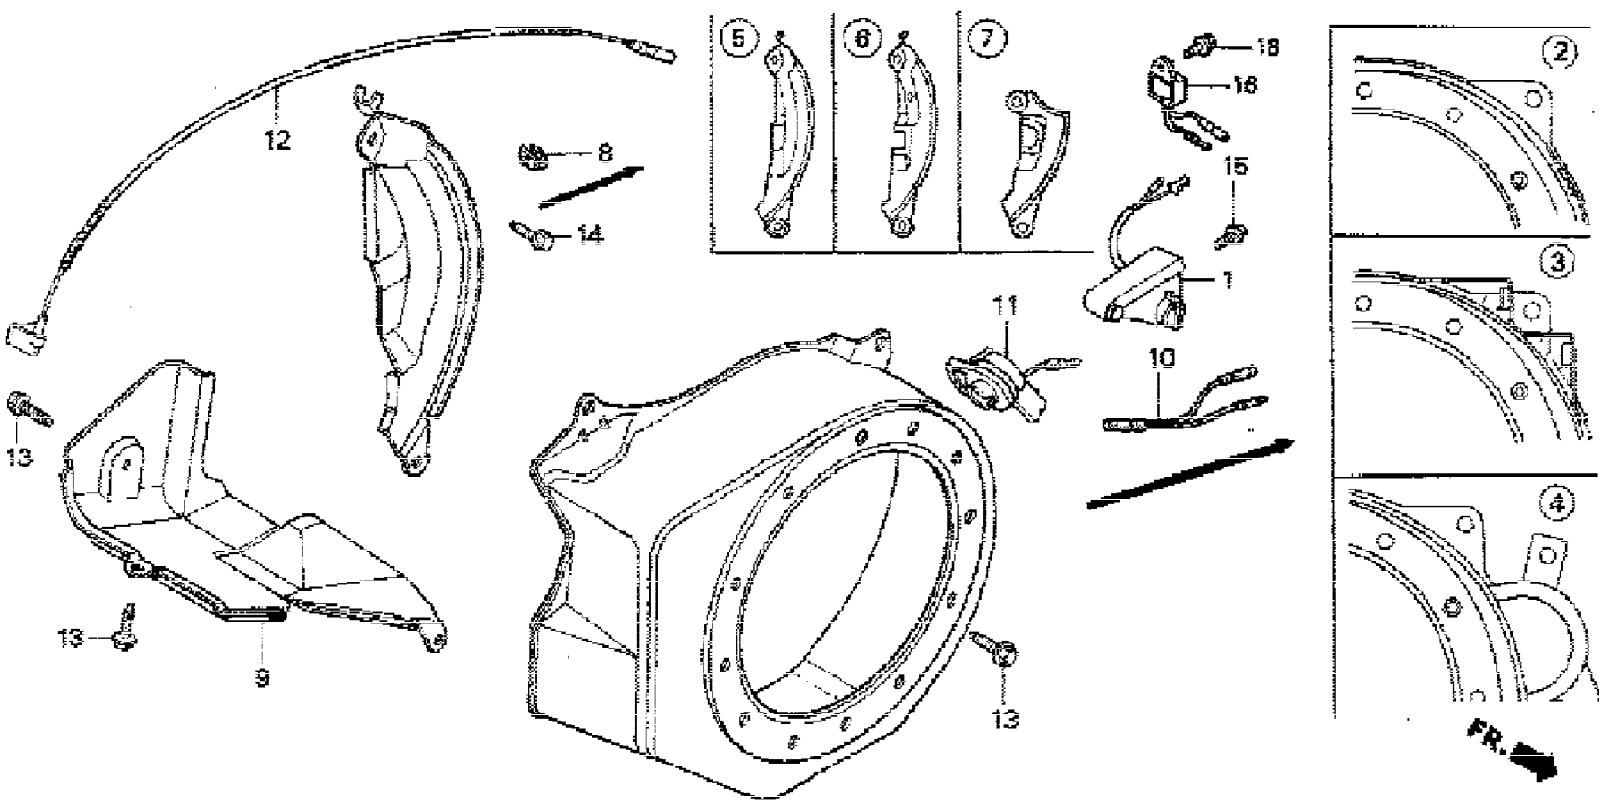

Ref #	Part Number	Qty	Description
1	15520-ZE1-003	1	ALERT UNIT, OIL Use up to Engine SN 2468252. (Honda Code 1554401).
2	19610-ZE1-000ZA	1	COVER, FAN *R8* (BRIGHT RED) Use from Engine SN 2468253. (Honda Code 3417490).
3	19610-ZE1-810ZA	1	COVER, FAN *R8* (OIL ALERT) (BRIGHT RED) Use up to Engine SN 2468252. (Honda Code 3593522).
5	19611-ZH8-810	1	PLATE, SIDE (OIL ALERT) Use from Engine SN 5372719. (Honda Code 5891528).
5	19612-ZH8-810	1	PLATE, SIDE (STD) Use up to Engine SN 4795905. (Honda Code 3683778).
5	19612-ZH8-811	1	PLATE, SIDE (OIL ALERT) Use from Engine SN 4795906 to 5066322. (Honda Code 5425624).
5	19612-ZH8-812	1	PLATE, SIDE Use from Engine SN 5066323 to 5372718. (Honda Code 5891536).
8	19613-ZE1-010	1	CLAMP, CORD Use up to Engine SN 4368640. (Honda Code 5891544).
8	90601-ZH7-013	1	CLIP, HARNESS Use from Engine SN 4368641. (Honda Code 5263934).
9	19630-ZH8-000	1	SHROUD (Honda Code 3683802).
10	32197-ZH8-003	1	SUB-HARNESS Use from Engine SN 2468253. (Honda Code 4193082).
11	36100-ZE1-015	1	SWITCH ASSY., ENGINE STOP Use from Engine SN 2468253. (Honda Code 2787869).
11	36100-ZH7-003	1	SWITCH ASSY., ENGINE STOP Use from Engine SN 4368641. (Honda Code 5266184).
12	36101-ZE1-010	1	WIRE, STOP SWITCH (370MM) (Honda Code 3684032).
13	90013-883-000	6	BOLT, FLANGE (6X12) (CT200) Use from Engine SN 2708337. (Honda Code 0636845).
13	90016-ZE1-000	6	BOLT, FLANGE (6X13) Use up to Engine SN 2708336. (Honda Code 1541002).
14	90022-888-010	1	BOLT, FLANGE (6X20) (CT200) (Honda Code 0671552).
15	95701-06008-00	2	BOLT, FLANGE (6X8) Use up to Engine SN 2468252. (Honda Code 2581353).
16	34150-ZH7-003	1	ALERT UNIT, OIL Use from Engine SN 5380586. (Honda Code 5858444).
18	95701-06008-00	1	BOLT, FLANGE (6X8) Use from Engine SN 5379476. (Honda Code 2581353).



Ref #	Part Number	Qty	Description
1	13331-357-000	1	KEY, SPECIAL WOODRUFF (25X18) (Honda Code 0348433).
2	19511-ZE1-000	1	FAN, COOLING (Honda Code 1428051).
4	28451-ZH8-003	1	PULLEY, STARTER (Honda Code 3683943).
5	30500-ZE1-033	1	COIL ASSY., IGNITION (Honda Code 4589693).
6	30700-ZE1-013	1	CAP ASSY., NOISE SUPPRESSOR (Honda Code 3526837).
7	31100-ZE1-810	1	FLYWHEEL (LAMP) (Honda Code 1501741).
7	31100-ZE1-811	1	FLYWHEEL (LAMP) (Honda Code 5308440).
20	90121-952-000	2	BOLT, FLANGE (6X25) (Honda Code 0748111).
21	90201-878-003	1	NUT, SPECIAL (14MM) (Honda Code 0442038).

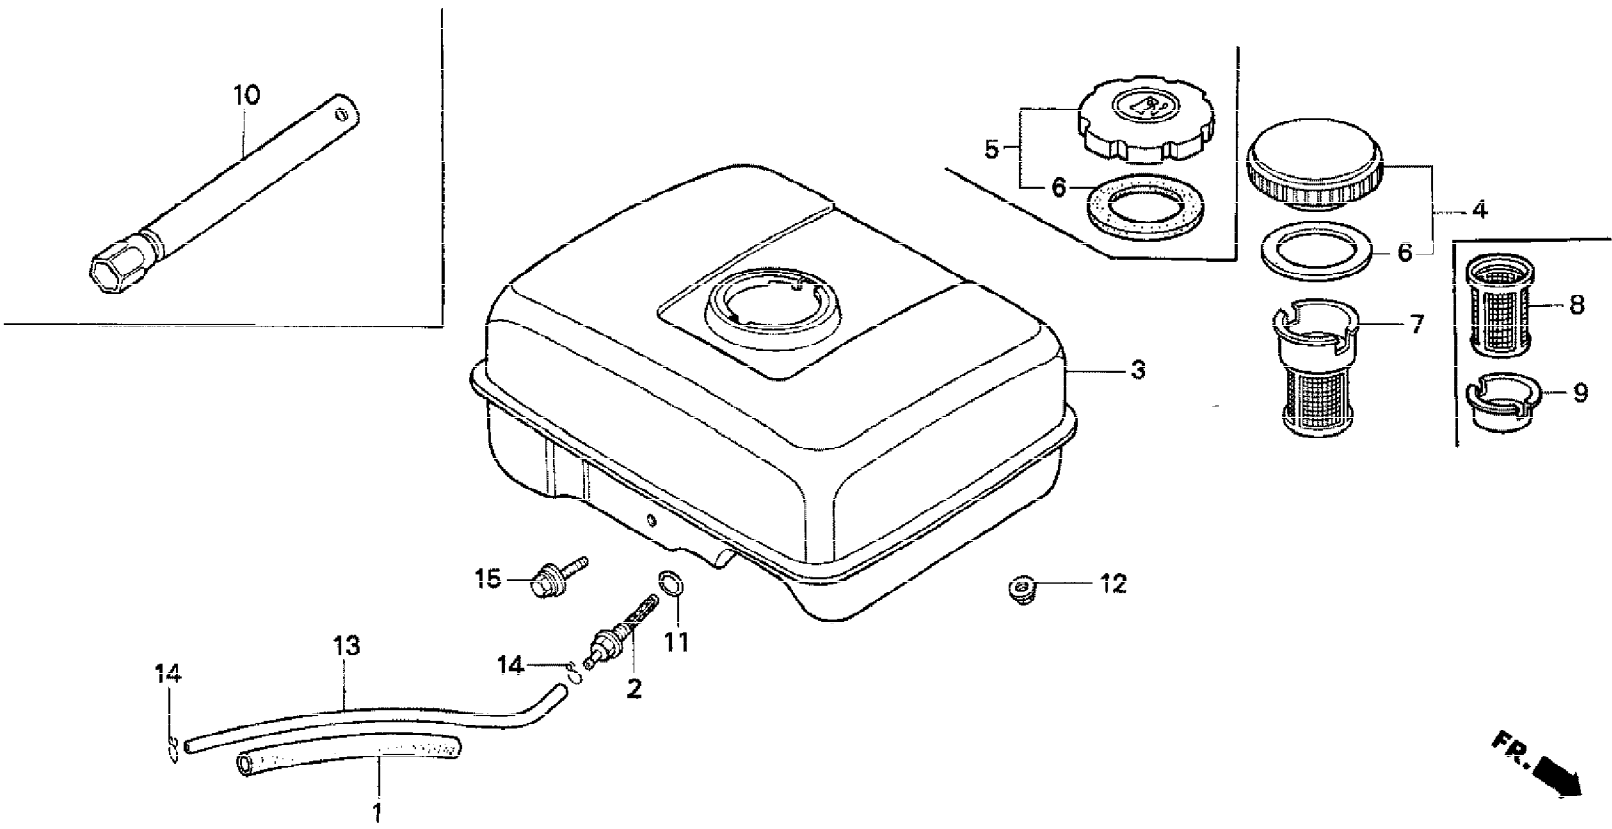



FR. 

Ref #	Part Number	Qty	Description
1	16854-ZH8-000	1	RUBBER, SUPPORTER (107MM) (Honda Code 3683646).
2	16955-ZE1-000	1	JOINT, FUEL TANK (Honda Code 1427459).
3	17510-ZE1-020ZA	1	TANK, FUEL *NH31* (MCKINLEY WHITE) (Honda Code 3683661).
4	17620-ZE2-W00	1	CAP, FUEL FILLER Use up to Engine SN 3063877. (Honda Code 3682028).
5	17620-ZH7-023	1	CAP, FUEL FILLER Use from Engine SN 3063878. (Honda Code 5344817).
6	17631-ZH7-003	1	GASKET, FUEL FILLER CAP Use from Engine SN 3063878. (Honda Code 4608725).
6	17631-329-003	1	GASKET, FUEL FILLER CAP Use up to Engine SN 3063877. (Honda Code 2820587).
11	91353-671-003	1	O-RING (13.5X1.5) (ARAI) (Honda Code 0949883).
12	94050-06000	2	NUT, FLANGE (6MM) (Honda Code 0471623).
13	95001-45003-60M	1	BULK HOSE, FUEL (4.5X3000) (4.5X140) (Honda Code 5137104).
14	95002-02080	2	CLIP, TUBE (B8) (Honda Code 0250647).
15	95700-06025-00	1	BOLT, FLANGE (6X25) Use up to Engine SN 2000037. (Honda Code 0484485).
15	95701-06025-00	1	BOLT, FLANGE (6X25) (Honda Code 2105831).



**No Artwork**

**Available**

Ref #	Part Number	Qty	Description
	GASKET KIT		
	06111-ZH8-405	1	GASKET KIT (Optional). (Honda Code 5177738).
1	11381-ZH8-801	1	GASKET, CASE COVER (NON-ASBESTOS) (Optional). Use from Engine SN 3413170. (Honda Code 4723144).
2	12251-ZF1-800	1	GASKET, CYLINDER HEAD (Optional). (Honda Code 3683380).
3	12391-ZE1-000	1	GASKET, CYLINDER HEAD COVER (Optional). (Honda Code 1426527).
4	15625-ZE1-003	2	GASKET, OIL FILLER CAP (Optional). Use from Engine SN 2966710. (Honda Code 4497947).
5	16212-ZH8-800	1	GASKET, INSULATOR (Optional). (Honda Code 3683547).
6	16221-ZH8-801	1	GASKET, CARBURETOR (Optional). (Honda Code 4725289).
7	18381-ZH8-800	1	GASKET, MUFFLER (Optional). (Honda Code 3683745).



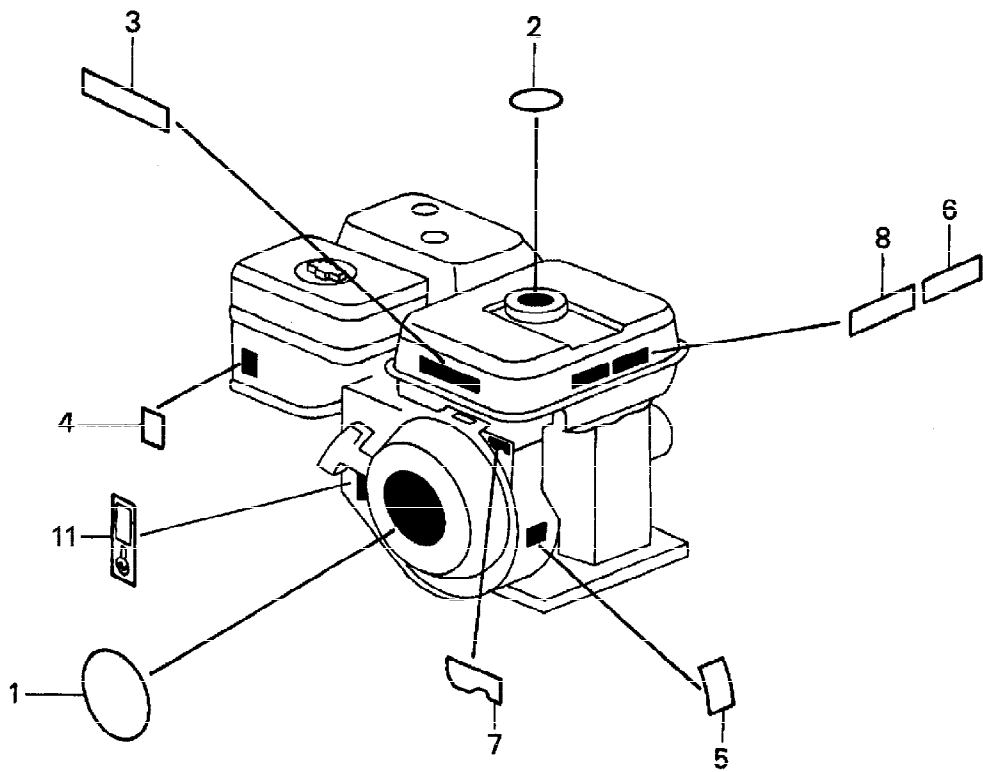
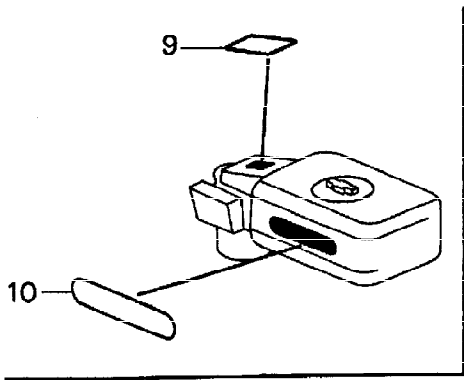


Ref #	Part Number	Qty	Description
1	87521-ZH8-010	1	EMBLEM (INTERNAL) Use from Engine SN 2468253 to 7438467. (Honda Code 4212478).
1	87521-ZH8-010	1	EMBLEM (INTERNAL) Use up to Engine SN 2468252. (Honda Code 4212478).
1	87521-ZH8-020	1	EMBLEM (5.5) Use from Engine SN 7438468. (Honda Code 6752141).
2	87522-ZE1-810	1	MARK, CAUTION (EXTERNAL) Use up to Engine SN 3063877. (Honda Code 1431014).
3	87522-ZH9-000	1	LABEL, CAUTION (Honda Code 3684206).
4	87528-ZE1-810	1	MARK, CHOKE (Honda Code 1696715).
5	87530-ZH8-810	1	LABEL, SPECIFICATION (EXTERNAL) Use up to Engine SN 2709371. (Honda Code 3684214).
6	87532-ZB4-G60	1	MARK, OIL ALERT (GERMAN) Use from Engine SN 2739161. (Honda Code 4425443).
6	87532-ZB4-H50	1	MARK, OIL ALERT (FRENCH) Use from Engine SN 2739161. (Honda Code 4425450).
7	87532-ZE1-810	1	MARK, OIL ALERT (EXTERNAL) Use up to Engine SN 2468252. (Honda Code 1540988).
8	87532-ZH8-810	1	MARK, OIL ALERT (E) Use from Engine SN 2468253. (Honda Code 4193355).
11	87135-ZE2-000	1	LABEL (E-SPEC) Use from Engine SN 7493515. (Honda Code 6638068).

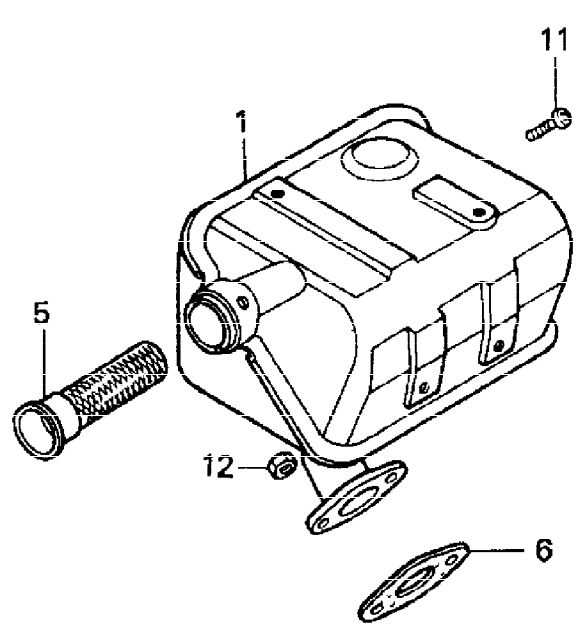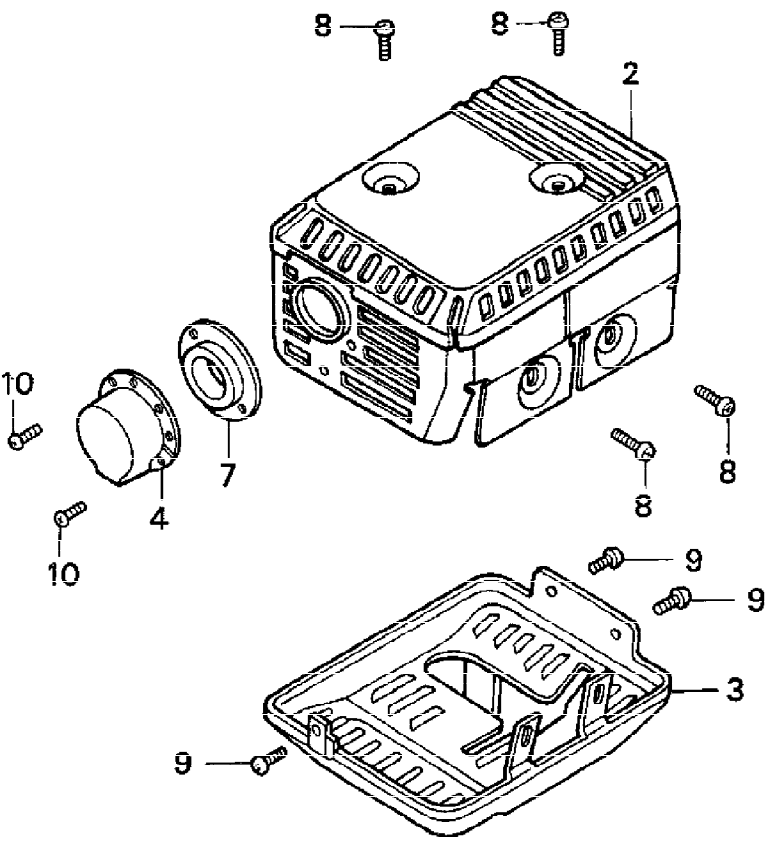


FR. 

Ref #	Part Number	Qty	Description
1	18310-ZF1-000	1	MUFFLER (Honda Code 3683703).
1	18310-ZH8-810	1	MUFFLER (Optional). (Honda Code 3683711).
2	18320-ZF1-H01	1	PROTECTOR, MUFFLER Use from Engine SN 3244960. (Honda Code 4644811).
2	18320-ZF1-H01	1	PROTECTOR, MUFFLER Use up to Engine SN 3244959. (Honda Code 4644811).
5	18355-ZE1-000	1	ARRESTER, SPARK (Optional). (Honda Code 1427780).
6	18381-ZH8-800	1	GASKET, MUFFLER (Honda Code 3683745).
8	90050-ZE1-000	4	SCREW, TAPPING (5X8) (Honda Code 1431105).
11	90055-ZE1-000	1	SCREW, TAPPING (4X6) (Optional). (Honda Code 1431121).
12	94001-08000-0S	2	NUT, HEX. (8MM) (Honda Code 0167338).

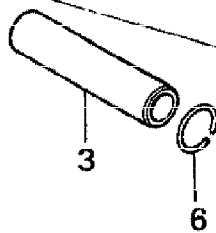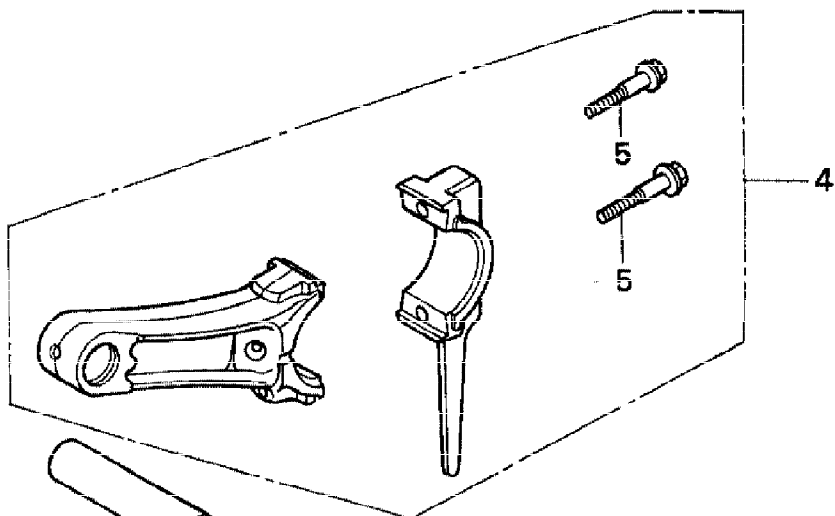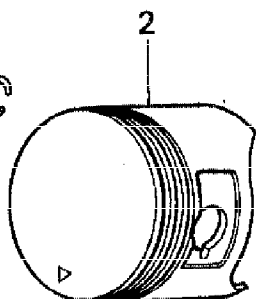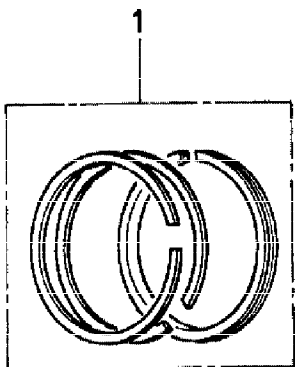

FR.

Ref #	Part Number	Qty	Description
1	13010-ZF1-023	1	RING SET, PISTON (STD) Use up to Engine SN 5495899. (Honda Code 3011285).
1	13010-ZH8-941	1	RING SET, PISTON (STD) Use from Engine SN 5495900. (Honda Code 5396585).
1	13010-ZH8-942	1	RING SET, PISTON (STD) Use from Engine SN 5495900. (Honda Code 5396593).
1	13011-ZF1-023	1	RING SET, PISTON (OS 0.25) (Optional). Use up to Engine SN 5495899. (Honda Code 3018025).
1	13011-ZF1-024	1	RING SET, PISTON (OS 0.25) (Optional). Use up to Engine SN 5495899. (Honda Code 2995405).
1	13011-ZH8-941	1	RING SET, PISTON (OS 0.25) (Optional). Use from Engine SN 5495900. (Honda Code 5396601).
1	13011-ZH8-942	1	RING SET, PISTON (OS 0.25) (Optional). Use from Engine SN 5495900. (Honda Code 5396619).
1	13012-ZF1-023	1	RING SET, PISTON (OS 0.50) (Optional). Use up to Engine SN 5495899. (Honda Code 3018033).
1	13012-ZH8-941	1	RING SET, PISTON (OS 0.50) (Optional). Use from Engine SN 5495900. (Honda Code 5396627).
1	13012-ZH8-942	1	RING SET, PISTON (OS 0.50) (Optional). Use from Engine SN 5495900. (Honda Code 5396635).
1	13013-ZF1-023	1	RING SET, PISTON (0.75) (Optional). Use up to Engine SN 5495899. (Honda Code 3018058).
1	13013-ZH8-941	1	RING SET, PISTON (0.75) (Optional). Use from Engine SN 5495900. (Honda Code 5396643).
1	13013-ZH8-942	1	RING SET, PISTON (0.75) (Optional). Use from Engine SN 5495900. (Honda Code 5396650).
2	13101-ZH8-000	1	PISTON (STD) (Honda Code 3683398).
2	13102-ZH8-000	1	PISTON (OS 0.25) (Optional). (Honda Code 3683406).
2	13103-ZH8-000	1	PISTON (OS 0.50) (Optional). (Honda Code 3683414).
2	13104-ZH8-000	1	PISTON (0.75) (Optional). (Honda Code 3683422).
3	13111-ZE1-000	1	PIN, PISTON (Honda Code 1426584).
4	132A0-ZE1-000	1	ROD ASSY., CONNECTING (US 0.25) (Optional). (Honda Code 1441344).
4	13200-ZE1-000	1	ROD ASSY., CONNECTING Use up to Engine SN 3430748. (Honda Code 1426600).
4	13200-ZE1-010	1	ROD ASSY., CONNECTING (Honda Code 4725255).
5	90001-ZE1-000	2	BOLT, CONNECTING ROD (Honda Code 1431055).
6	90551-ZE1-000	2	CLIP, PISTON PIN (18MM) (Honda Code 2539120).

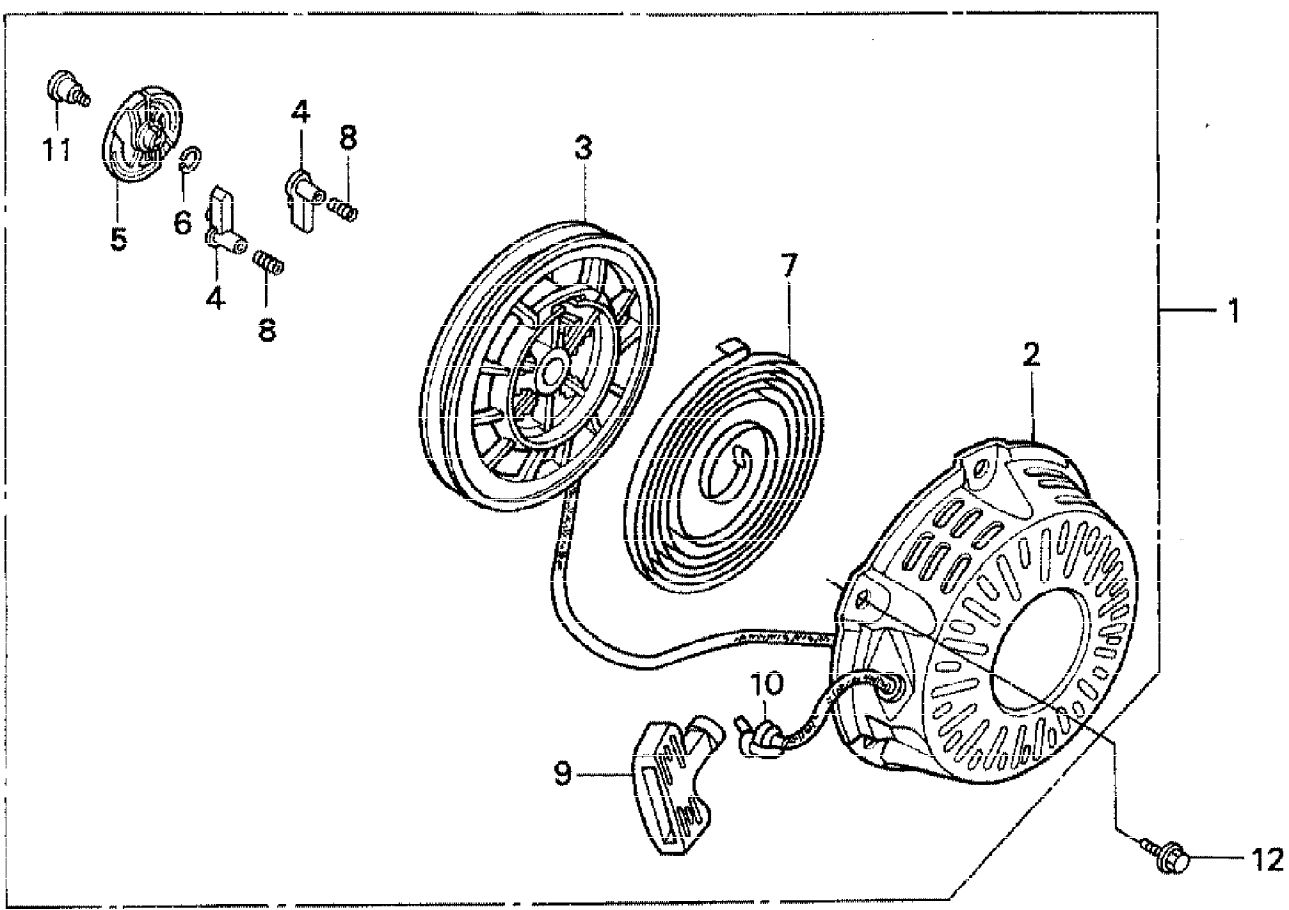

FR. 

Ref #	Part Number	Qty	Description
1	28400-ZH8-003ZA	1	STARTER ASSY., RECOIL *R8* (BRIGHT RED) Use up to Engine SN 2438252. (Honda Code 3683851).
1	28400-ZH8-013ZA	1	STARTER ASSY., RECOIL *R8* (BRIGHT RED) Use up to Engine SN 2438252. (Honda Code 4193033).
2	28410-ZH8-003ZA	1	CASE, RECOIL STARTER *R8* (BRIGHT RED) (Honda Code 3683869).
3	28420-ZH8-003	1	REEL, RECOIL STARTER Use up to Engine SN 2438252. (Honda Code 3683877).
3	28420-ZH8-013	1	REEL, RECOIL STARTER (Honda Code 4193066).
4	28422-ZH8-013	2	RATCHET, STARTER (Honda Code 4193074).
5	28433-ZH8-003	1	GUIDE, RATCHET (Honda Code 3683893).
6	28441-ZH8-003	1	SPRING, FRICTION (Honda Code 3683901).
7	28442-ZH8-003	1	SPRING, RECOIL STARTER (Honda Code 3683919).
8	28443-ZH8-003	2	SPRING, RETURN (Honda Code 3683927).
9	28461-ZH8-003	1	KNOB, RECOIL STARTER (Honda Code 3683950).
10	28462-ZH8-003	1	ROPE, RECOIL STARTER (NA USE ALT:08550-ZG921-11) (Honda Code 3683968).
11	90003-ZH8-003	1	SCREW, SETTING (Honda Code 3684222).
12	90008-ZE2-003	3	BOLT, FLANGE (6X10) (Honda Code 6437289).